

FITTING INSTRUCTIONS FOR


Out-Back Maxtrax Mount

SKU

COMPATIBILITY

KS0380

Out-Back Spare Tyre Mount

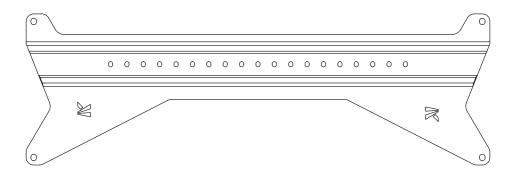

| Included contents | | | | | |
|-------------------|-------------------------|--|--|--|--|
| QTY | COMPONENT | | | | |
| 1 | Out-Back Maxtrax Mount | | | | |
| 2 | M8x16 Flanged Hex Bolts | | | | |
| 2 | M8 Flanged Nuts | | | | |
| 4 | M8 DIN Washers | | | | |

| Also required | | | | |
|---------------|-----------------------------------|--|--|--|
| Q T Y | COMPONENT | | | |
| 1 | Out-Back Spare Tyre Mount & Strap | | | |
| 4 | Maxtrax Mounting Pins | | | |
| | | | | |

5 minutes / A sip of beer!

For further information contact KAON on 07 3180 1470 or info@kaon.com.au

🖑 Time

| Bolt Torque | | | | | | | | |
|--------------------|------|------|-------|-------|-------|--|--|--|
| DIAMETER (mm) | 5mm | 6mm | 8mm | 10mm | 12mm | | | |
| NEWTON-METRES (Nm) | 5 Nm | 9 Nm | 22 Nm | 44 Nm | 77 Nm | | | |

Let's get to work.


Preparation

- It's best if we get the mounting pins attached to the Maxtrax Mounts first. If you ordered a set of pins, these will have been included. If you already had some, that's great! If you've lost them, we know a place you can buy some...
- The genuine Maxtrax Mounting Pin Set contains 4 x pins, 4 x nyloc nuts and 4 x washers. We find it easiest to attach the pins to the Maxtrax Mounts by holding the pin in place with a spanner, while using a socket to tighten the nut.
- Ensure the final position of the pin matches the same orientation as the keyholes of your Maxtrax.



Installation

- Attach the Maxtrax Mount to the Spare Tyre Mount. We recommend sitting the mounts up against the tyre to work out what positioning will work best for your setup, ensuring that your rear door or rear bar swingaway are able to open unaffected.
- Secure the Maxtrax Mount to the Spare Tyre Mount using the M8 bolts, nuts and washers.
- Position the Spare Tyre Mount on the tyre, and secure with the provided ratchet strap. We advise ensuring that the hooks are facing outwards with the ratchet at the top of the tyre.
- Load on your Maxtrax, lock them in place using the pins and you're ready to hit the road!

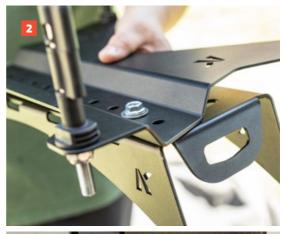





Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.